


## **R7 Remote Control**

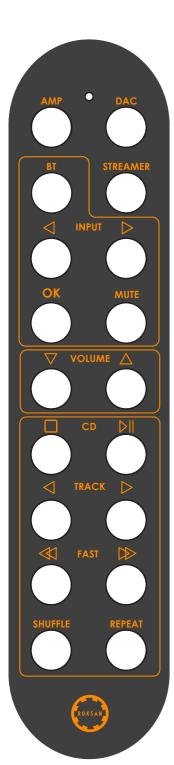

Pressing the AMP button on the R7 at any time puts the remote control into Amplifier mode. Pressing the DAC button at any time puts the R7 into DAC operating mode.

Selecting the INPUT arrows ( $\triangleleft$  &  $\triangleright$ ) will allow the user to scroll through the amplifier inputs when in Amplifier or DAC mode (Bluetooth is seperate to this function). If controlling a Blak amplifier, the OK button will need to be pressed to confirm input selection.

Pressing the BT button will select the Bluetooth source and the BT indicator (LED or text) on the amplifier will flash. If necessary, search for and connect to 'ROKSAN K3' or 'ROKSAN BLAK' in the list of available Bluetooth devices. When paired or connected the indicator will stop flashing and remain on. You are now ready to stream music to the amplifier from the paired device.

The MUTE button will mute the volume. If pressed again it will take the amplifier back out of mute mode.

The VOLUME down and up arrows (  $\nabla$  &  $\triangle$  ) will adjust the volume control knob in the relevant direction for the desired listening level. If you have used the R7 remote to control another K3 component you will have to press the AMP button again to return remote functionality to the Amplifier.

The bottom section of the R7 will control the K3 CD Player functionality - STOP □, PLAY/PAUSE ▷II, SKIP TRACKS ☑ & ▷ and SEARCH TRACKS ☑ & ▷ ). Pressing SHUFFLE will play the tracks in random mode. a Single press of REPEAT will repeat the current track and a second press will repeat the entire CD/ playlist. A third press will cancel the repeat function.

Replacement battery type CR2032, the battery is under a cover on the rear of the remote, secured by a cross head screw.



## **CAUTION**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



## **WARNING**

Do not ingest the battery, Chemical Burn Hazard.

This remote control contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product, keep it away from children and contact Roksan for a replacement.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## **Roksan Audio**

24 Brook Road, Rayleigh, Essex, SS7 7XJ, United Kingdom www.roksan.co.uk